


# ZoneGuard

Weather Alert Clock Radio with Flashing Beacon

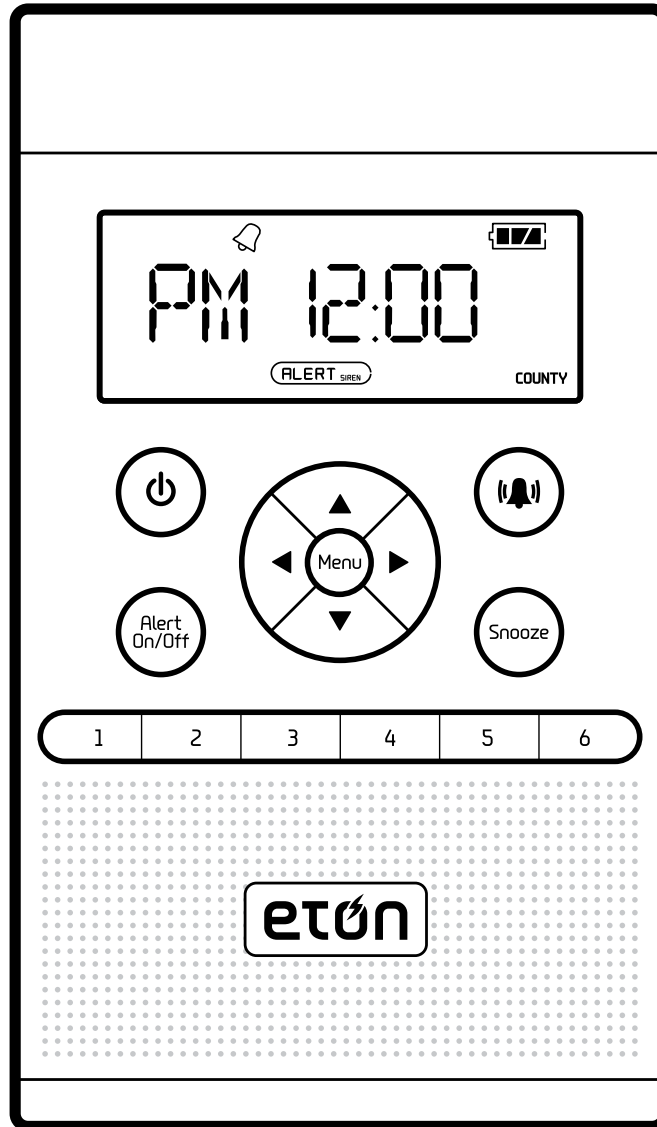

Owner's manual

**eton**  
EMPOWERED BY NATURE



**NEED HELP? CONTACT US.**

Etón Corporation, 1015 Corporation Way, Palo Alto, CA  
94303, USA. 1-800-872-2228 (U.S.); 1-800-637-1648  
(Canada); 650-903-3866 (worldwide); M-F, 8:00-4:30,  
Pacific Standard Time; [www.etoncorp.com](http://www.etoncorp.com).

**WARNING**


- Do not expose this appliance to rain or moisture.
- Do not submerge or expose for extended period to water.
- Protect from high humidity and rain.
- Only operate within specified temperature range (0 °C to 40 °C).
- Unplug immediately if liquid has been spilled or any object has fallen into the apparatus.
- Clean only with a dry cloth. Do not use detergents or chemical solvents as this might damage the finish.
- Unplug and disconnect external antennas during lightning storms.
- Do not remove cover [or back].
- Refer servicing to qualified service personnel.

**ENVIRONMENT****Disposal**

According to the European Directive 2002/96/EC all electrical and electronic products must be collected separately by a local collection system.

Please act according to your local rules and do not dispose of your old products with your normal household waste.


Please dispose of all types of batteries per your Government, State or Local rules and/or regulations. If you are unsure, please call the appropriate local authority to find out how to dispose of them safely and help protect the environment.

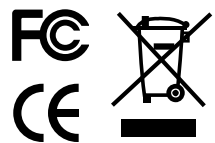

## ZONE**GUARD**

Thank you for purchasing the Etón ZoneGuard. We want you to thoroughly enjoy the use of this product. To take advantage of its many excellent and unique features, we urge you to carefully read the Owner's Manual.


### FRONT

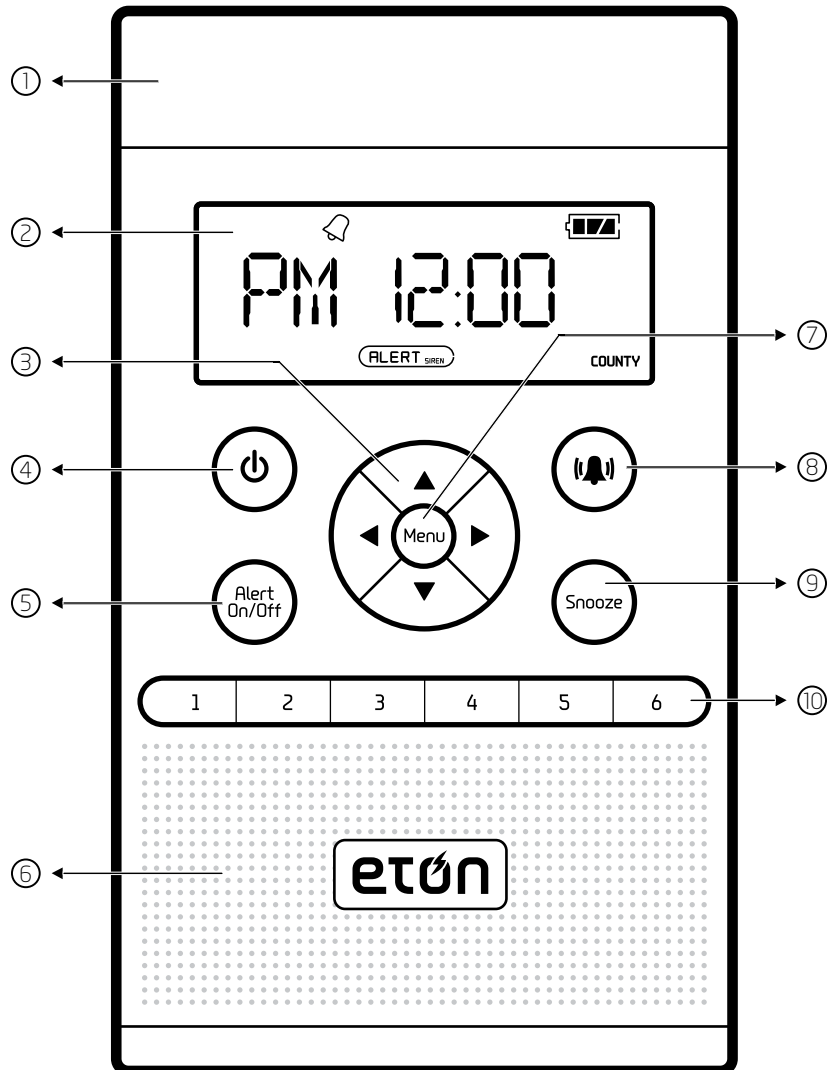

- |                 |                       |
|-----------------|-----------------------|
| ① Alert Light   | ⑥ Speaker             |
| ② Display       | ⑦ Menu Button         |
| ③ Select Button | ⑧ Alarm ON/OFF        |
| ④ Power Button  | ⑨ Snooze Button       |
| ⑤ Alert ON/OFF  | ⑩ Memory Location 1-6 |

**LEFT SIDE**

**RIGHT SIDE**

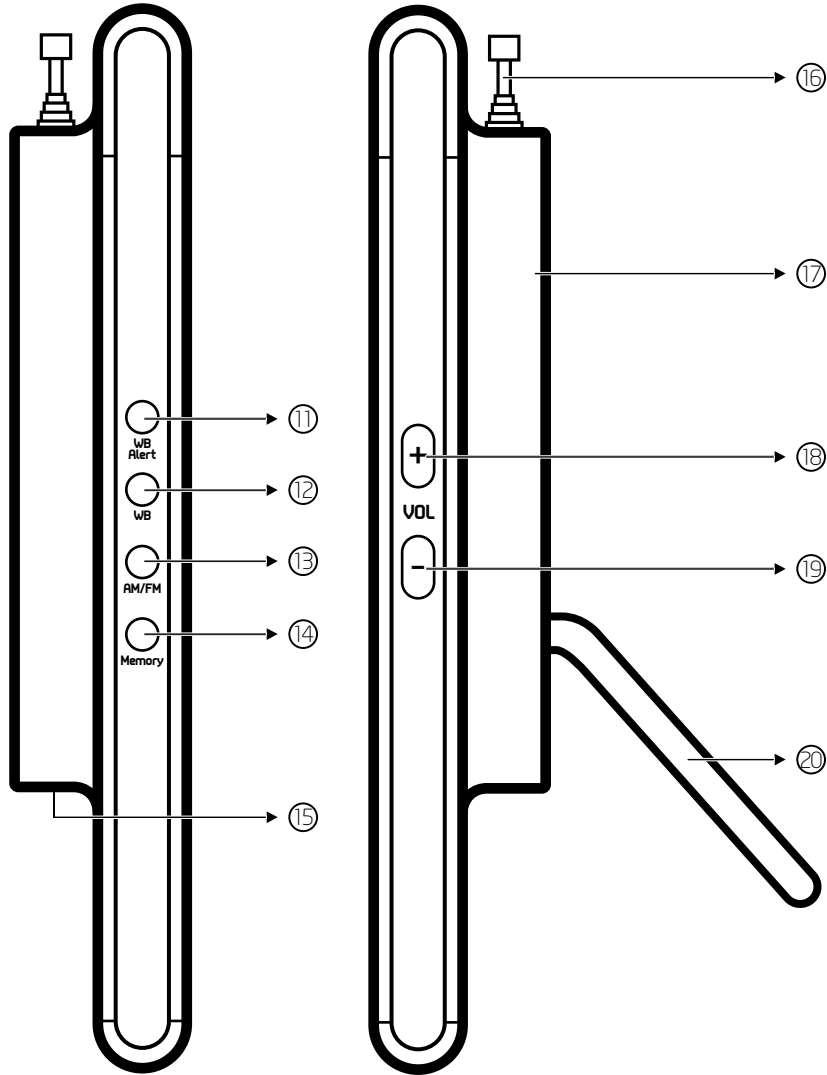

- ① Weatherband Alert Button
- ② Weatherband Button
- ③ AM/FM Button
- ④ Memory Button
- ⑤ DC-in

- ⑥ Antenna
- ⑦ Battery Compartment
- ⑧ Volume +
- ⑨ Volume -
- ⑩ Backstand


## POWER SUPPLY

### Battery Power (3 AA Batteries)

Install 3xAA batteries with correct polarity shown in the compartment (on the back of the radio).


### DC-IN 5V AC Adapter

Plug in the AC adapter (5V, 150mA) to the DC IN socket.

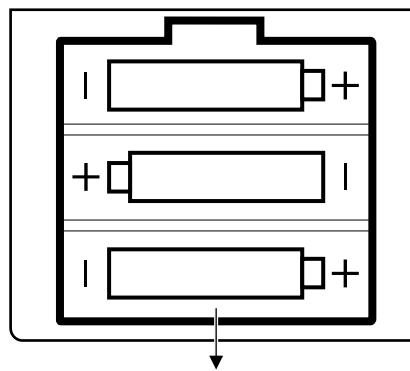

AA Battery Compartment

## TURNING THE UNIT ON/OFF

The unit is powered with 3 AA batteries and AC adapter. Press the <  > button to turn ON/OFF the unit.


## VOLUME CONTROL

Press the <+> or <-> button (located on the right side of the unit) to adjust the volume.

## LISTEN TO AM/FM

### Select Band

Press the <AM/FM> button to listen to AM/FM band, repeatedly press it to shift between AM and FM.

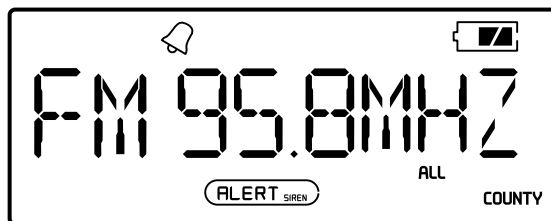


### Tuning in Stations

1. Manual Tuning: Press the <▲> or <▼> button repeatedly to tune into your desired station.
2. Auto Scan Tuning: Press and hold the <▲> or <▼> button until frequency starts scanning to auto tune into the next available station. If the signal is not strong enough, you can tune manually to get a better reception.

### Storing Stations

When listening to AM/FM band, tune into your desired station, press the <MEMORY> button (the last button on the left side of the unit), the LCD will display <STORE-->. Press either of the 6 <Memory Location> buttons, located on the front of the unit, above the speakers. You can directly press the corresponding memory location to retrieve the saved station.

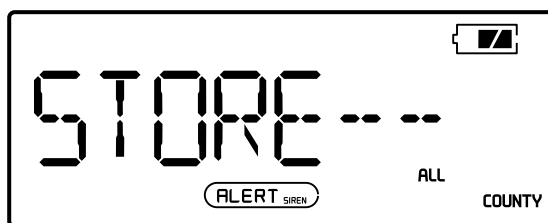

To retrieve better reception when listening to the FM station, adjust the length of the antenna and place near a window. When listening to the AM station, rotate the unit to retrieve a signal.

## **ALERT LIGHT**

### **Warning (Red Light)**

A warning is issued when a hazardous weather or hydrologic event is occurring, imminent or likely. A warning means weather conditions pose a threat to life or property. People in the path of the storm need to take protective action.

### **Watch (Orange Light)**


A watch is used when the risk of a hazardous weather or hydrologic event has increased significantly, but its occurrence, location or timing is still uncertain. It is intended to provide enough lead time so those who need to set their plans in motion can do so. A watch means that hazardous weather is possible. People should have a plan of action in case a storm threatens and they should listen for later information and possible warnings especially when planning travel or outdoor activities.

### **Advisory (Green Light)**

An advisory is issued when a hazardous weather or hydrologic event is occurring, imminent or likely. Advisories are for less serious conditions than warnings, that cause significant inconvenience and if caution is not exercised, could lead to situations that may threaten life or property.

## SETTING THE CLOCK

1. In OFF mode, press the <MENU> button to enter <SETUP TIME> mode.
2. Press the <◀> or <▶> button. When the hour flashes, press the <▲> or <▼> button to adjust the hour.
3. After adjusting the hour, press <◀> or <▶>. When the minute flashes, press <▲> or <▼> to adjust the minute.
4. Press the <MENU> button to confirm.

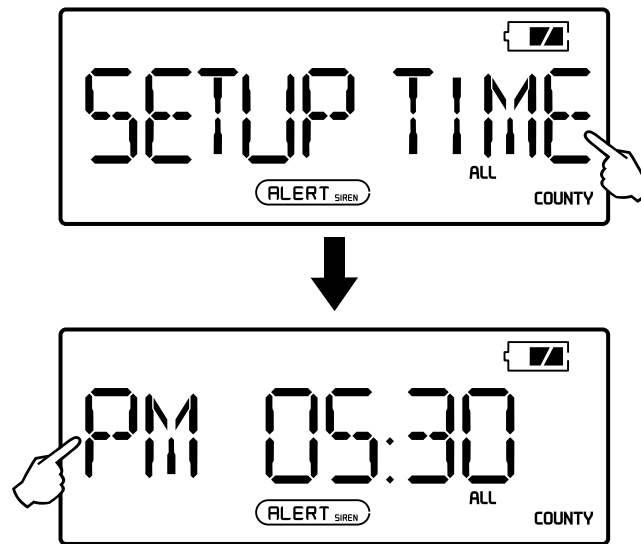


**NOTE:** The clock mode is 12 hours; <AM> displays in the morning and <PM> displays in the afternoon and night.

## SETTING THE ALARM

### Setting The Alarm Time


1. In radio OFF mode, press the <MENU> button, then press the <▲> or <▼> button to enter <SETUP ALARM> mode.

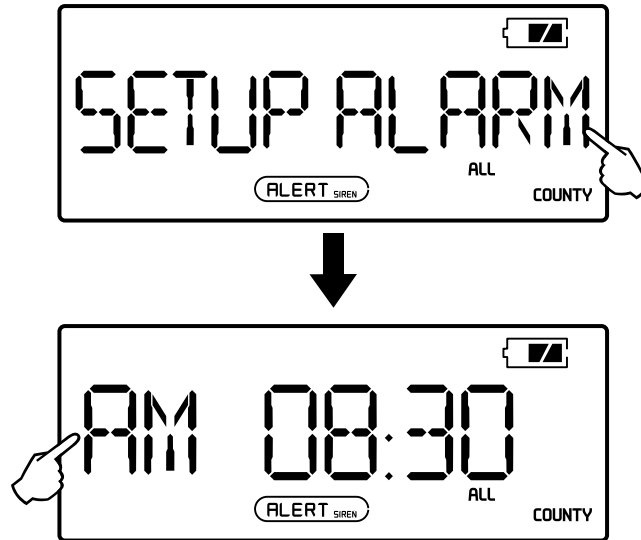

2. In the <SETUP ALARM> mode, press the <◀> or <▶> button. When the hour flashes, press the <▲> or <▼> button to adjust the hour.
3. After adjusting the hour, press the <◀> or <▶> button, when the minute flashes, press <▲> or <▼> to adjust the minute.
4. Press the <MENU> button to confirm.


### Activating and deactivating the alarm

Press the <🔔> button to activate or deactivate the alarm. If the alarm function is activated, the symbol <🔔> will show on the display. When the alarm time is reached, the unit will set off a beep. If the alarm function is deactivated, the alarm symbol <🔔> will disappear.

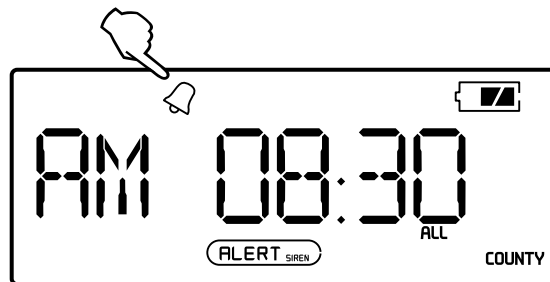


## SNOOZE FUNCTION

When the alarm activates, press the <SNOOZE> button to snooze for 5 minutes (the symbol < zzz > will appear in the display). After 5 minutes, the unit will start to beep again. Press the < (🔔) > button to turn off the Snooze function.

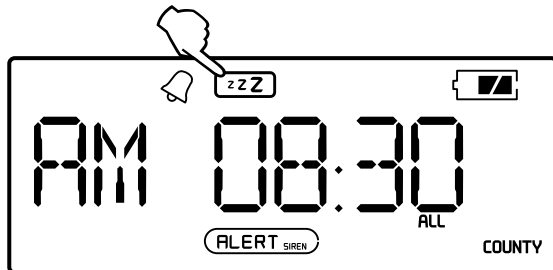


## LISTEN TO WEATHER BAND

1. Turn on the radio, press <WB> button shortly to receive the weather band. You can also press the <WB ALERT> button (the first button on the left side of the unit) shortly to enter standby mode to receive weather band. The symbol <ALERT.WB> appears in the display if the unit is in standby mode.
2. Press the button < ▲ > or < ▼ > to select the weather station(CH1-CH7 is available).

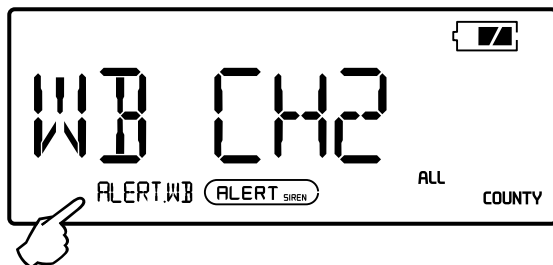


**WB ALERT:** Receiving alert in silent, no sound when not receiving any messages.

3. Once receiving the weather information, the <Warning Light> will be on and you can receive the weather message in the display. If you press <ALERT ON/OFF> button shortly, the alarm beep will be off but you can still receive the message in the display.
4. Press <◀> or <▶> shortly, you can read the received 4 messages. If there are not any weather information, the LCD will display <NO MESSAGE>.

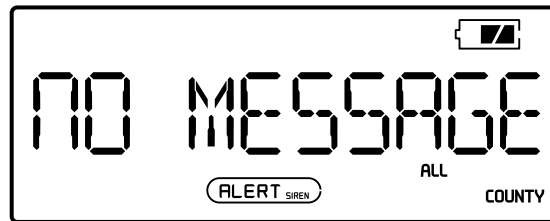

## SETTING ALERT

1. In radio off mode, press <MENU> button shortly and then press <▲> or <▼> to enter <ALERT - SIREN/VOICE/DISPL> mode.

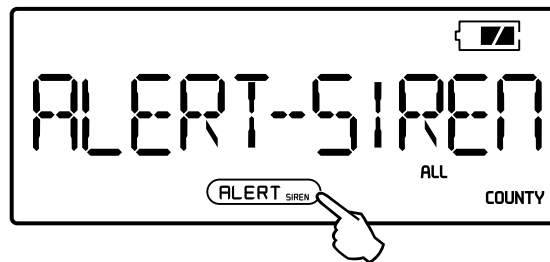

2. Press <◀> or <▶> button, when the <SIREN/VOICE/DISPL> flashes, then press <▲> or <▼> to select <SIREN>, <VOICE> or <DISPL>.
3. Press the <MENU> button to confirm.


**[VOICE]:** The alarm beep will play about a few seconds and the LCD will display the message.

**[SIREN]:** The alarm beep will play about 5 minutes and the LCD will display the message.


**[DISPL]:** No alarm beep, just display the message in the LCD when received a weather information.

## SELECT THE COUNTY

1. In the radio off mode, press <MENU> button and then press <▲> or <▼> to enter to <COUNTY - ALL/SINGL/MULTI> mode.
2. Press <◀> or <▶> button with <ALL>, <SINGL> or <MULTI> flashes, then press <▲> or <▼> button repeatedly to select from the three.  
 Select <SINGL> if you want to enter a code for a single area.  
 Select <MULTI> if you want to enter mutiple codes for different areas.  
 Select <ALL> if you do not know the local code.

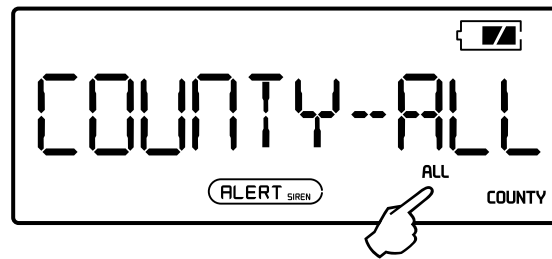

3. Press the <◀> or <▶> button to start inputting county code.
4. Press the <▲> or <▼> button to set first code digit.
5. Repeat step 3 and 4 until all other digits are set.
6. Press the <MENU> button to confirm and exit the menu.

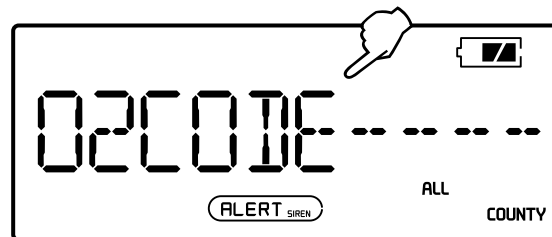

## SETTING DEFEAT

1. In radio off mode, press the <MENU> button, then press the <▲> or <▼> button shortly to enter <DEFEAT-SIREN> mode.
2. Press the <◀> or <▶> button to make the alert mode scroll in the display.
3. Press the <▲> or <▼> button to switch from one alert mode to another, carefully reading each other.
4. Press the <◀> or <▶> button to select enable or disable.
5. Press the <MENU> button to confirm and exit.



**ENABLE:** Alert when receiving a message.

**DISABLE:** Displays the message on the LCD when receiving a message.

## **WARRANTY REGISTRATION**

To ensure full warranty coverage or product updates, registration of your product should be completed as soon as possible after purchase or receipt.

Please go to <http://www.etoncorp.com/productregistration> to register your product.

## **LIMITED WARRANTY**

Retain the warranty information from your warranty card with your proof of purchase or the Limited Warranty information can also be viewed at [www.etoncorp.com](http://www.etoncorp.com).

## **SERVICE FOR YOUR PRODUCT**

To obtain service for your product, we recommend first contacting an Etón service representative at 800-872-2228 US, 800-637-1648 Canada or (650) 903-3866 for problem determination and troubleshooting. If further service is required, the technical staff will instruct how to proceed based on whether the radio is still under warranty or needs non-warranty service.

## **PRODUCT WARRANTY**

Visit <http://www.etoncorp.com/productregistration> to register your product and get warranty information.

## **WARRANTY**

If your product is still in warranty and the Etón service representative determines that warranty service is needed, a return authorization will be issued and instructions for shipment to an authorized warranty repair facility. Do not ship your radio back without obtaining the return authorization number.

## **NON-WARRANTY**

If your product is no longer under warranty and requires service our technical staff will refer you to the nearest repair facility that will be able to best handle the repair.

For service outside of North America, please refer to the distributor information included at time of purchase/receipt.



## **Etón Corporation**

Corporate Headquarters  
1015 Corporation Way  
Palo Alto, California 94303 USA  
tel +1 650-903-3866  
tel +1 800-872-2228  
fax +1 650-903-3867

## **Etón Canada**

5580 Explorer Drive, Suite 503  
Mississauga, Ontario L4W 4Y1 Canada  
tel +1 416-214-6885

**[www.etoncorp.com](http://www.etoncorp.com)**